

Understanding my Heating System



5. Re-set the boiler and wait

1. My heating is not working



4. Find the filling loop and increase water pressure

2. Locate the boiler



3. Ascertain the water pressure level (should be above 1.5)



Please note If you feel uncomfortable with the above please call Halo Housing and staff will advise on 01254 676677/07533565018